 


Connect to Zoom

Using a Video Conferencing Room System

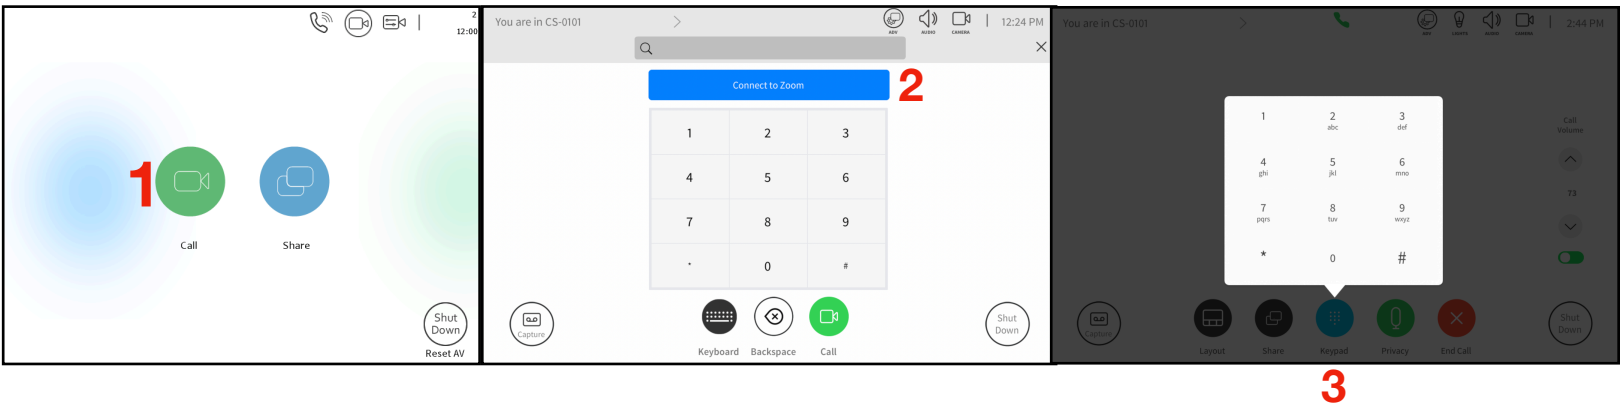

 
Connect to Zoom First, then share.

Connect to Zoom First:

1. Press **Call** button.
2. Press the blue **Connect to Zoom** button. The unit will then connect to Zoom.
3. Use the **Keypad** to **enter in your meeting ID followed by #** and then **enter in your passcode** using the same keypad.

Share Content:

1. Connect your laptop into the room system or wake up the built-in computer
2. Press the **Share** button.
Press the computer source you wish to share
Laptop or **Built in Computer**
3. Verify with end users they can see your content.

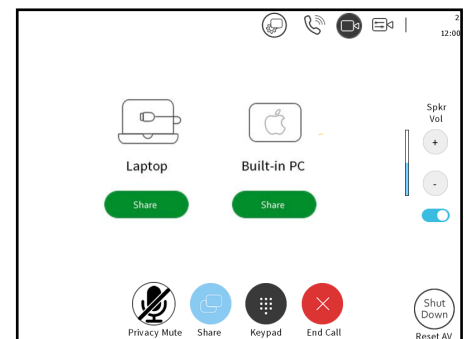


Customize your connection:

View: **A**

Toggle between the two options (fullscreen content or video on the top content below) by pressing the **Layout** button on the touch panel.

 To view video only press **stop** on the sharing content menu.

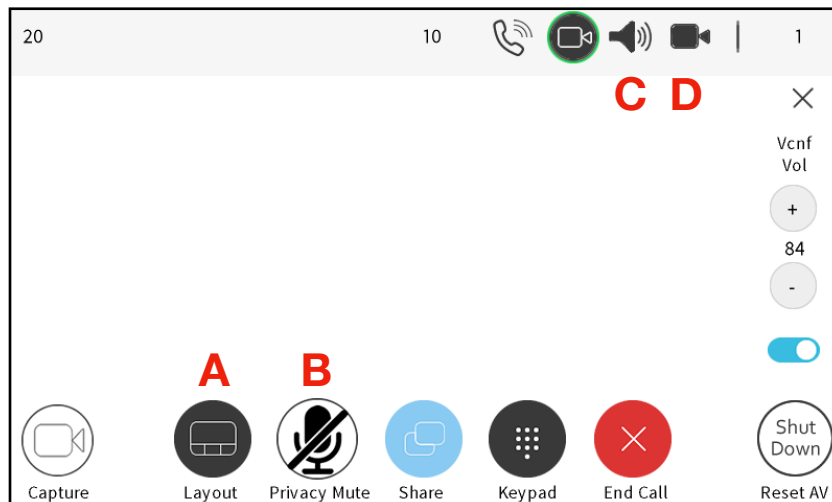

Mute Yourself: **B**

Press the Privacy Mute Button.

Audio Volume: **C**

Press the Speaker Icon to adjust.

Camera Angle: **D**

To adjust camera angle press the camera icon and choose a preset or manually move the camera.